Your Complete Wood Stove Venting Solution


STEP 2 - Determine the number of Chimney Lengths Required

This chart will help determine chimney lengths required.

CHIMNEY LENGTH SELECTION CHART											
Chimney Height	Leng 36"	ths Req 18"	uired 12"	Chimney Height	Leng 36"	ths Req 18"	uired 12"	Chimney Height	Leng 36"	ths Req 18"	uired 12"
4'	1	1	-	12 1/2'	4	-	1	20'	7	-	<.
5'	1	1	1	13'	4	1	_	21'	7	-	1
5 1/2'	2	-	-	14'	4	1	1	22'	7	1	-
6 1/2'	2	-	1	14 1/2'	5	-	-	22 1/2'	7	1	1
7'	2	1	120	15 1/2'	5	-	1	23'	8	_	-
8'	2	1	1	16'	5	1	-	24'	8	-	1
8 1/2'	3	-	-	17'	5	1	1	24 1/2'	8	1	-
9 1/2'	3	-	1	17 1/2'	6	-	-	25 1/2'	8	1	1
10'	3	1	653	18'	6	-	1	26'	9	-	-
11'	3	1	1	19'	6	1	-	27'	9	-	1
11 1/2'	4	-	S#2	19 1/2'	6	1	1				

The chimney must extend at least 3' above the highest point where it passes through the roof surface and at least 2' higher than any part of the building within a horizontal distance of 10'.

NOTE: When calculating the installed length of your chimney subtract 1" for each joint & include the Height Requirements shown in this illustration.

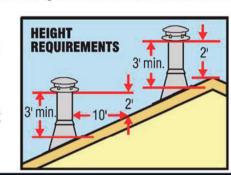

STEP 3 - Verify the proper Roof Flashing required for your installation


To determine which Roof Flashing you require, work out the pitch of your roof.

Roofs with low inclines require a 0/12 - 6/12 Roof Flashing:

Roofs with steep inclines require a 7/12 - 12/12 Roof Flashing:

To calculate your roof pitch use one of the 12 inch rulers to measure the number of inches (A) from the end of the other ruler down to the roof. (as shown in this illustration For example:

If (A) equals 3" then the roof pitch is 3/12.

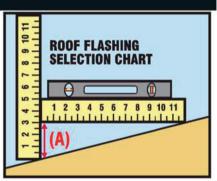


STEP 4 - For Ceiling Support Installations Only

If an offset is required to avoid rafters or other obstructions.

Measure the horizontal distance required and the vertical height available.

Refer to the Chimney Offset Chart.

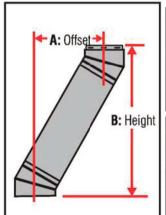


** Refer to installation instructions for addition information on offsets

15º OFFSET CHART									
Elbow	01:11	6 " Dia	ameter	7" Dia	ameter	8" Diameter			
	Chimney Lengths	Α	В	Α	В	Α	В		
2x150	9" chimney length	3-3/4"	18-1/2"	3-5/8"	18-7/8"	3-5/8"	19-1/4"		
2x150	12" chimney length	4-1/2"	20-3/8"	4-1/8"	20-3/4"	4-1/8"	20-7/8"		
2x150	18" chimney length	5-5/8"	26-1/8"	5-3/4"	26-1/2"	5-3/4"	26-3/4"		
2x15°	36" chimney length	10-3/8"	43-7/8"	10-1/2"	44-1/8"	10-1/2"	44-1/2"		

30º OFFSET CHART									
Elbow	01.	6" Dia	meter	7" Di:	ameter	8" Diameter			
	Chimney Lengths	Α	В	A	В	Α	В		
2x30°	9" chimney length	7-3/4"	20"	8"	20-1/2"	8-1/8"	21-3/16		
2x30°	12" chimney length	8-5/8"	21-1/2"	8-7/8"	22-1/4"	9"	22-3/4"		
2x30°	18" chimney length	11-3/4"	26-3/4"	11-7/8"	27-3/8"	12"	28"		
2x30°	36" chimney length	20-7/8"	42-5/8"	21"	43-3/16"	21-1/4"	43-7/8"		

Helpful Installation Tips

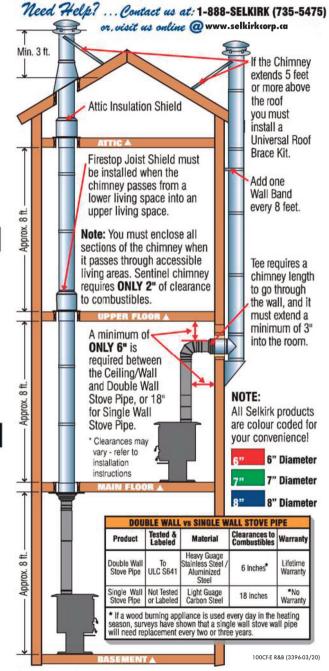

Selkirk Canada Corporation 950 South Service Road Second Floor Stoney Creek , ON L8E 6A2 Toll Free: 1.888.SELK/IRK (735-5475) cscanada@selkirk.org.com

www.selkirkcorp.ca




INSTALLATION PLANNING GUIDE



Getting Started


Before you begin, determine the (inner) diameter of your Chimney.

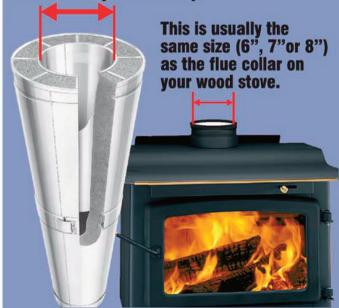



STEP 5 - Determine the Double Wall Stove Pipe parts needed to complete your installation


MODEL CF SENTINEL WOOD STOVE CHIMNEY PARTS


QTY TOTAL

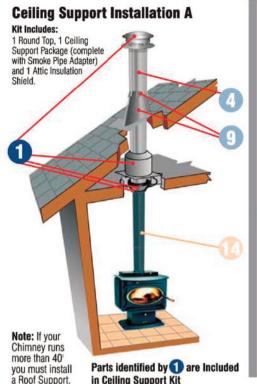


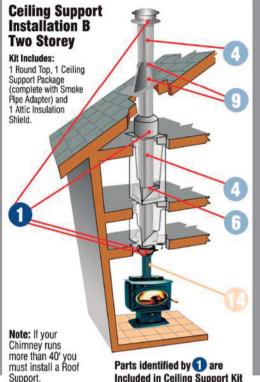

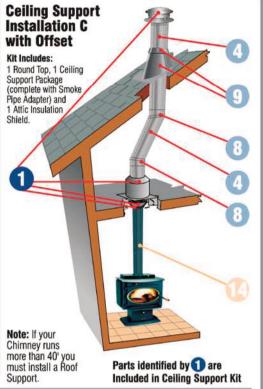


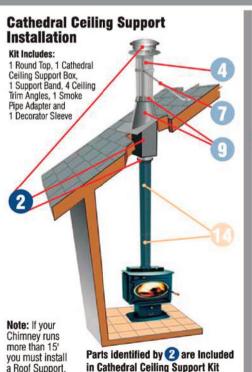

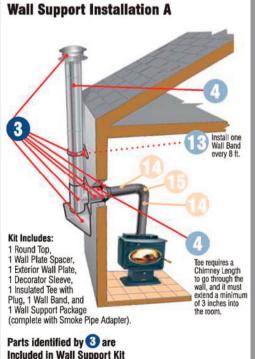

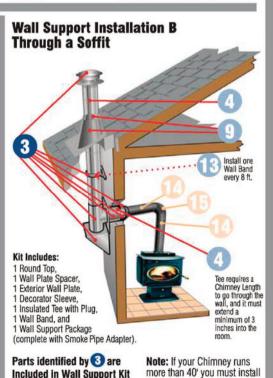

a Roof Support.

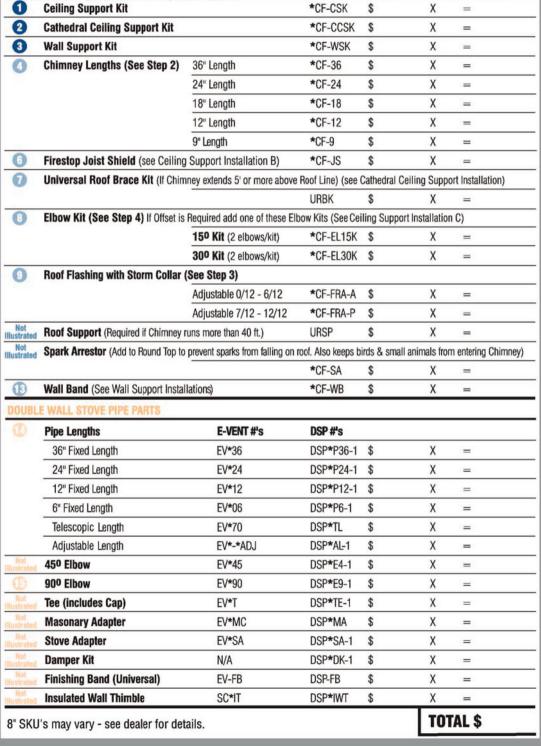

NOTE: Asterisk "*" shown in Part #'s represents diameter required

Part #