

READ INSTRUCTIONS CAREFULLY BEFORE STARTING THE PROJECT. REMEMBER THAT SAFETY COMES FIRST. OUR CHIMNEY SYSTEMS ARE DESIGNED FOR INSTALLATION BY A QUALIFIED PERSON IN ACCORDANCE WITH LOCAL BUILDING CODES.

**WEAR CUT RESISTANT GLOVES WHILE HANDLING METAL PARTS**

**CAUTION: TO AVOID PERSONAL INJURY. SHARP EDGES OR PROJECTIONS CAN CUT YOU.**



Tested to: UL 103 HT, ULC-S604, ULC-S610, ULC-S629

The Smoke Pipe Adapter is easy to install. This new design allows for the Smoke Pipe Adapter to be placed on the inlet end of a length with retainer in place. The length is then ready to be installed into a support or through a wall or ceiling (per main instructions).

### Contents (Figure 1):

- SPA Stub - 304 Stainless steel construction with flat black finish
- Metal Retainer - 304 Stainless steel construction



Figure 1

3. Wrap the metal retainer around the SPA stub and under the inward bead found on the inlet end of the outer chimney casing (figures 4 and 5).

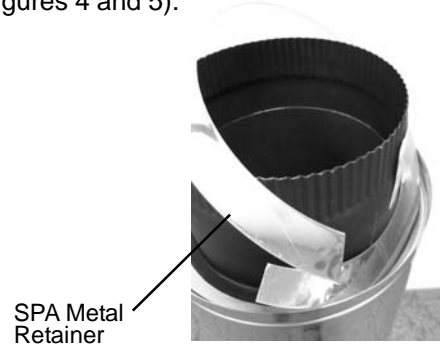


Figure 4

### How to Install:

1. PLACE SPA Stub (flange toward inlet end) over the inner liner on the inlet end of the chimney length until flange is snug against plastic (Figures 2 and 3).

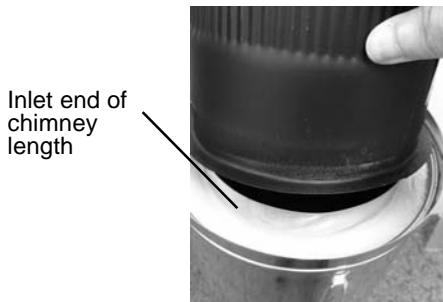


Figure 2

2. Ensure the SPA Stub flange is snug with plastic retainer (Figure 3).

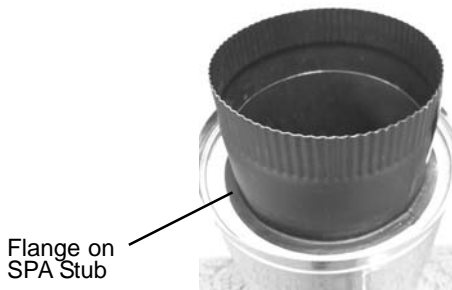


Figure 3

4. Ensure the metal retainer overlaps the flange of the SPA stub and under the inward bead (figure 5).



Figure 5